



## TI-Setting the DX02 and DXPL02

Note: Refer to Home Owner's manual for explanation of modes of operation.


1. Turn the control ON using ON/OFF button. 
  2. Press Fan button  to change fan speed.
  3. Press Mode button  to select Ventilation  or Recirculation\*  or combination of both.
- \*Recirculation not available on all models.

## Setting the Dehumidistat

Note: Refer to Home Owner's manual for a description of this function.


1. The control displays the indoor humidity in

LARGE numbers and settings in SMALL numbers.

 
2. Press and release the  button to select the desired indoor humidity or OFF to cancel this function.
3. If the indoor humidity is above the humidity settings, the unit will go into HIGH speed.

## 20/40/60 Minute High Speed Timer


This function temporarily initiates high speed ventilation for 20, 40, or 60 minutes.

Press Timer button  to select 20, 40, 60 minutes or to cancel the function.

## Service Indicator (Applies to DXPL02 Only)

When service indicator appears , unit may require routine maintenance. Refer to "Maintenance Routine" in Home Owner's manual.

To reset the service indicator:

1. When control is on, press and hold the  button

## Reset Button

This button will clear the current settings and set the unit to fan speed 1 (LOW), Ventilation mode and Dehumidistat settings of 40%.